



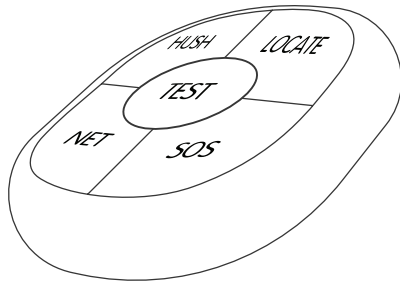

**WARNING: Product contains a lithium button battery. Hazardous: Keep away from children.** The battery can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body. If swallowed, seek medical attention immediately. Always ensure battery cover is screwed close.

## Turning On

Remove the battery isolation tab before use & ensure battery cover is firmly screwed down.

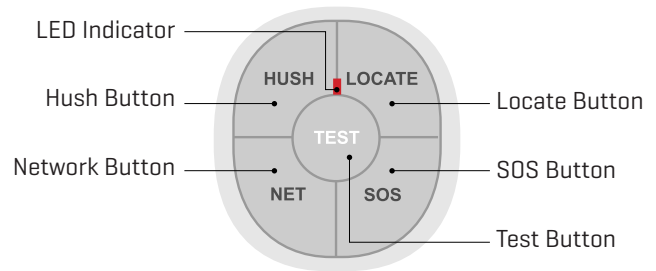

# VOLTEX® SASREM

SMOKE ALARM WIRELESS REMOTE  
USER MANUAL

*Please read these instructions carefully before connection and operation.*

## PRODUCT SPECIFICATIONS:

Power	DC 3V [CR2450]- Replaceable
Connectable with	SAS115BW*; SASWM* [See note below]
Wireless Frequency	433.42MHz
Wireless Distance	>3 meters **
Temperature Range	10~45°C
Humidity Range	≤80% RH
Battery Lifetime	Min 1 year
Compliance	AS/NZS 4268
Standby Current	≤3uA
Operation Current	≤30mA
Size	53mm[W] x 62mm[H] x16mm

Button	Function
<b>LOCATE</b>	Press to silence all the connected smoke alarms EXCEPT the unit that initiated the alarming. Assists in location of the primary triggered alarm. <b>NOTE:</b> May need to be pressed again depending on alarm layout configuration. If multiple alarms still sounding, move closer + press LOCATE again.
<b>HUSH</b>	<b>ONLY PRESS HUSH AFTER THE PRIMARY TRIGGERED ALARM HAS BEEN LOCATED.</b> Locate the smoke alarm that is still sounding after Pressing "LOCATE". If surroundings are safe, Press "HUSH". The smoke alarm should hush for 10 minutes when in "Hush Mode".
<b>TEST</b>	Press once to initiate a test on all connected smoke alarms. The red indicator light will flash for 8 seconds. All connected alarms should sound & then stop sounding approx 30 seconds after alarm sound commenced.
<b>NET [Network]</b>	First set up one of the smoke alarms as the "Master". Once Master created: Press the NET button on the remote control once to enter pairing. The red indicator light on remote will illuminate & If pairing is successful, it will flash briefly, then extinguish.
<b>SOS</b>	Press once to activate all connected smoke alarms for 1 minute. For use as an audible warning in event of a non-fire emergency. Press the "LOCATE" button to stop this alarm.

**\*\*Note: Transmission distance will vary depending on structural components.**

**If the Red LED doesn't flash at all on the remote, please check battery isolating tab is removed, polarity is correct & battery is not depleted.**

### \* Compatibility Note:

This remote is connectable with Voltex Smoke Alarm products displaying the remote symbol.



© Voltex Electrical 2020.  
All Rights Reserved.

AU P: 1300 722 275  
E: sales@voltexelectrical.com.au  
www.voltexelectrical.com.au

NZ P: 0800 55 66 33  
E: sales@voltexelectrical.co.nz  
www.voltexelectrical.co.nz