


V157 Fire Rated Wall Box Installation Instructions




1. Use box as a template to mark cut-out in wall. Cut-out size is approx. 96 x 52mm.
2. Cut accurate size opening in wall to ensure a neat fit of the wall box & minimal gap around the edges.
3. If bringing cables through rear of box, remove knockout for cable entry. Carefully slit intumescent mat inside box with a sharp knife, but **do not remove any intumescent material**.
4. Feed cables into wall box. Ensure intumescent mats are firmly against the rear of the wall box.
5. Ensure clamping arms are fully retracted into the box.
6. Insert the box into the wall cut-out.
7. Gently tap retaining lugs until box is firmly fixed into position.
8. Extend both clamping arms outwards.
9. Tighten clamping arm screws until box is firmly fixed in position.
Caution: Do no over-tighten.
10. Fit foam gasket supplied between the power outlet/ switch plate & box for acoustic properties
11. Use Fire Rated Sealant (FRS300), or equivalent, to completely seal any gaps around box or to replace any intumescent material inadvertently removed

NOTE: *Rating is dependent on strict adhesion to installation instructions.


1 Marking out

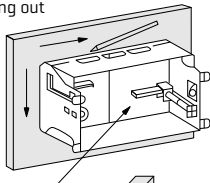

2 Insert box into cutout

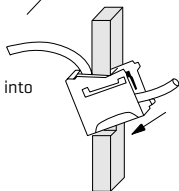

3 Feed cable into wall box

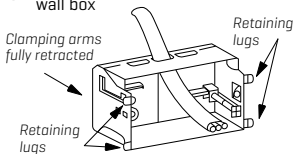

4 Extend both clamping arms outwards and tighten screws

