


VOLTEX® INSTRUCTION GUIDE


STUD MOUNTING SYSTEM

ITEMS INCLUDED




DISTANCES OF STUDS

MODEL	A(mm)
PSF12 (12 way flush)	270
PSF18 (18 way flush)	378
PSF24 (24 way flush)	270
PSF36 (36 way flush)	270

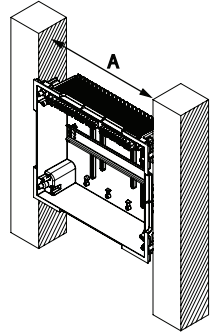


INSTALLATION PROCEDURE


- 1 Push support pieces into switchboard frame.

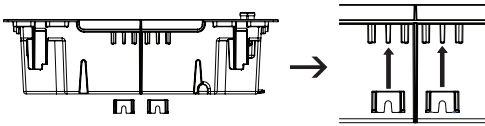


- 2 Pre-drill 4mm pilot hole through accessory and side of board.

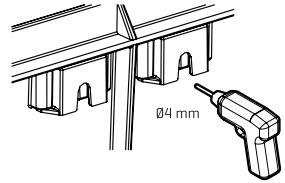

- 3 Snap off side flanges using pliers or side cutters.

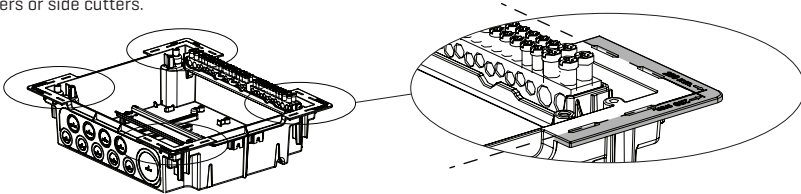

- 4 Product should be spaced out from wall by the distance of the plasterboard, so that the front of the plasterboard will eventually line up flush with the front lip of the board.

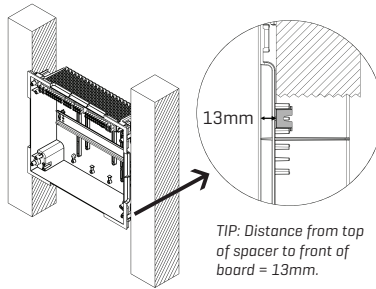

- 5 Secure board to studs using provided screws.

