



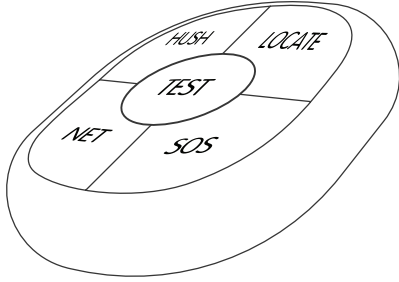

WARNING: Product contains a lithium button battery. Hazardous: Keep away from children. The battery can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body. If swallowed, seek medical attention immediately. Always ensure battery cover is screwed close.

Turning On

Remove the battery isolation tab before use & ensure battery cover is firmly screwed down.

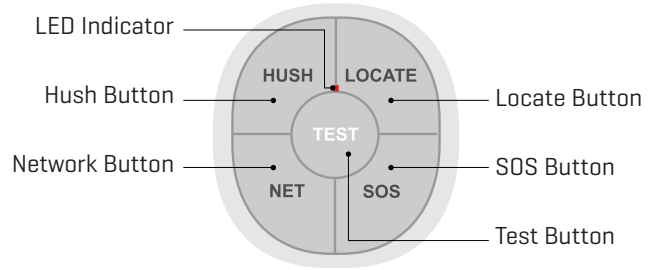

VOLTEX® SASREM

SMOKE ALARM WIRELESS REMOTE
USER MANUAL

Please read these instructions carefully before connection and operation.

PRODUCT SPECIFICATIONS:

Power	DC 3V [CR2450]- Replaceable
Connectable with	SAS115BW*; SASWM* [See note below]
Wireless Frequency	433.42MHz
Wireless Distance*	<5 meters* [HUSH & TEST & NET button] <10 meters* [LOCATE & SOS button]
Temperature Range	10~45°C
Humidity Range	≤80% RH
Battery Lifetime	Min 1 year
Compliance	AS/NZS 4268
Standby Current	≤3uA
Operation Current	≤30mA
Size	53mm[W] x 62mm[H] x16mm

Pairing: see section under "NET"

Button	Function
LOCATE	Press to silence connected smoke alarms within RF Range except the unit that initiated the alarming. Assists in location of the primary triggered alarm. NOTE: May need to be pressed again depending on alarm layout configuration. If multiple alarms still sounding, move closer + press LOCATE again.
HUSH	ONLY PRESS HUSH ONCE THE TRIGGERED ALARM HAS BEEN LOCATED. Locate the smoke alarm that is still sounding after locating. Press once. The smoke alarm should stop sounding for 10 minutes when in "Hush Mode".
TEST	Press once to initiate a test on all connected smoke alarms within RF Range. The red indicator light will flash for 8 seconds. All connected alarms should sound & then stop sounding approx 30 seconds after alarm sound commenced.
NET [Network] Pairing	1. First set up one of the smoke alarms as the "Master". [Note: Just one device should be set as "Master"]. 2. Ensure the Master Smoke Alarm is in SOS Pairing mode. If it has exited pairing, press the Test button 3 times to enter pairing mode. Press the NET button on the Remote control once to enter pairing mode. The red indicator light on remote will illuminate & If pairing is successful, it will flash briefly, then extinguish.
SOS	Press once to activate all connected smoke alarms for 1 minute. For use as an audible warning in event of an emergency. To force exit, press the "LOCATE" button once.

***Note: Transmission distance will vary depending on structural components.**

If the Red LED doesn't flash at all on the remote, please check battery isolating tab is removed, polarity is correct & battery is not depleted.

* Compatibility Note:

This remote is connectable with Voltex Smoke Alarm products displaying the remote symbol.



VOLTEX®

AU: 1300 722 275
NZ: 0800 55 66 33

✉ sales@voltex.com

🌐 www.voltex.com

© Voltex Electrical 2023. All Rights Reserved.